

## **POD-51T Jumper Options**

Installed		ımp = I				ıru	M8	3			
MCU	1	2	3		5	6	7	8	PWR	P0 / P1	P2 / P3
8031, 8032, 8051, 8052, 8031x2, 8032x2, 8054,8058	X				X	X	X		PWR 3V FXT	Install all on the P1 (top)	Install all on the P3 (top)
8751	X			X	X	X	X		PWR 3V EXT	Install all on the P1 (top)	Install all on the P3 (top)
8752	X		X		X	X	X		PWR 3V FXT	Install all on the P1 (top)	Install all on the P3 (top)
8754	X	X			X	X	X		PWR 3V FXT	Install all on the P1 (top)	Install all on the P3 (top)
8758	X	X	X		X	X	X		PWR 3V FXT	Install all on the P1 (top)	Install all on the P3 (top)
8951, 89S51				X	X	X	X		PWR 3V FXT	Install all on the P1 (top)	Install all on the P3 (top)
8952, 89S52, 8952X2			X		X	X	X		PWR 3V EXT	Install all on the P1 (top)	Install all on the P3 (top)
8953			X	X	X	X	X		PWR 3V EXT	Install all on the P1 (top)	Install all on the P3 (top)
8954, 8954X2		X			X	X	X		PWR 3V EXT	Install all on the P1 (top)	Install all on the P3 (top)
8958		X	X		X	X	X		PWR 3V EXT	Install all on the P1 (top)	Install all on the P3 (top)
8051RA	X	X			X	X	X		PWR 3V EXT	Install all on the P1 (top)	Install all on the P3 (top)
8051RB,8751RB, 8751RB2	X	X			X	X	X		PWR 3V EXT	Install all on the P1 (top)	Install all on the P3 (top)
8051RC,8751RC, 8751RC2	X	X	X		X	X	X		PWR 3V EXT	Install all on the P1 (top)	Install all on the P3 (top)
8051RD,8751RD, 8751RD2	X	X	X	X	X	X	X		PWR 3V FXT	Install all on the P1 (top)	Install all on the P3 (top)



8951RB, 8951RB2					X	X	X	PWR 3V EXT	Install all on the P1 (top)	Install all on the P3 (top)
8951RC, 8951RC2		X	X		X	X	X	PWR 3V EXT	Install all on the P1 (top)	Install all on the P3 (top)
8951RD, 8951RD2, 89C51ED2		X	X	X	X	X	X	PWR 3V EXT	Install all on the P1 (top)	Install all on the P3 (top)
8751U2	X		X	X	X	X	X	PWR 3V FXT	Install all on the P1 (top)	Install all on the P3 (top)

## POD-51T-C51RX2 Jumpers & Headers

