

Application Note Installing your Seehau software For Windows 7

- **Notice:** Seehau software is a 32-bit Application and so are the hardware drivers. This means that you must install your software on a 32-bit machine and not a 64-bit machine.
- Notice: If you are using the emulator via Parallel port additional hardware is required, due to the limitations of the Windows 7 parallel port driver(s).

To install Seehau and hardware drivers you need to exit the Autorun from the CD and locate the correct software on the CD for your emulator family. Find the Setup.exe program and right-click on the application and select Run As Administrator (Figure 1).

	Open	
۲	Run as administrator	
	Troubleshoot compatibility	
Ø	Scan with VIPRE	
ą	WinZip	•
	Restore previous versions	
	Send to	•
	Cut	
	Сору	
	Create shortcut	
	Delete	
	Rename	
	Properties	

Figure 1

At the end of the installation the software will give you the option to **Launch the Seehau Configuration**, do NOT select this option and finish the installation.

Once the installation is complete you need to locate the Seehau {family} icon in the program group for your emulator. Once you have located this icon, right-click and select and open the Properties for this application. Select the **Compatibility** tab. In this section select the **Run this program as the Administrator** option, and set the **Run this program in the compatibility mode for:** *Set the option to Windows XP* (*Service Pack 3*). Refer to figure 2.

ICE			
TECHNOLOGY NOHAU®	Embedded	System	Tools

Security	Details	Previous Versions
General	Shortcut	Compatibility
you have problem n earlier version of natches that earlier	is with this program an Windows, select the version.	d it worked correctly on compatibility mode that
lelp me choose t	the settings	
Compatibility mode	e	
Run this prog	gram in compatibility m	ode for:
Windows XP (S	Service Pack 3)	•
Settings		
Run in 256 c	colors	
Run in 640 x	480 screen resolution	1
Disable visua	al themes	
Disable desk	top composition	
Disable displ	ay scaling on high DP	l settings
Privilege Level		
Run this proc	aram as an administrat	or
🚱 Change setti	ngs for all users	

Figure 2

Once you have done this you may launch the Seehau software.

If you have any difficulties email support@icetech.com