

EMUL166-PC/ISO166/ST10-EXT

This is the diagram of the five extender boards used with the EMUL-ST10 and EMUL166. They are named front, rear, right, left, and X-Peripherals. The view is looking at the top of the emulator. Each board position is indicated on the individual extender diagram. The pins are for the ST10 and C166 families.

support@nohau.com



(888) 886-6428





(408) 866-1820

Campbell, California 95008

www.nohau.com

Version 2.0
May 23, 2006

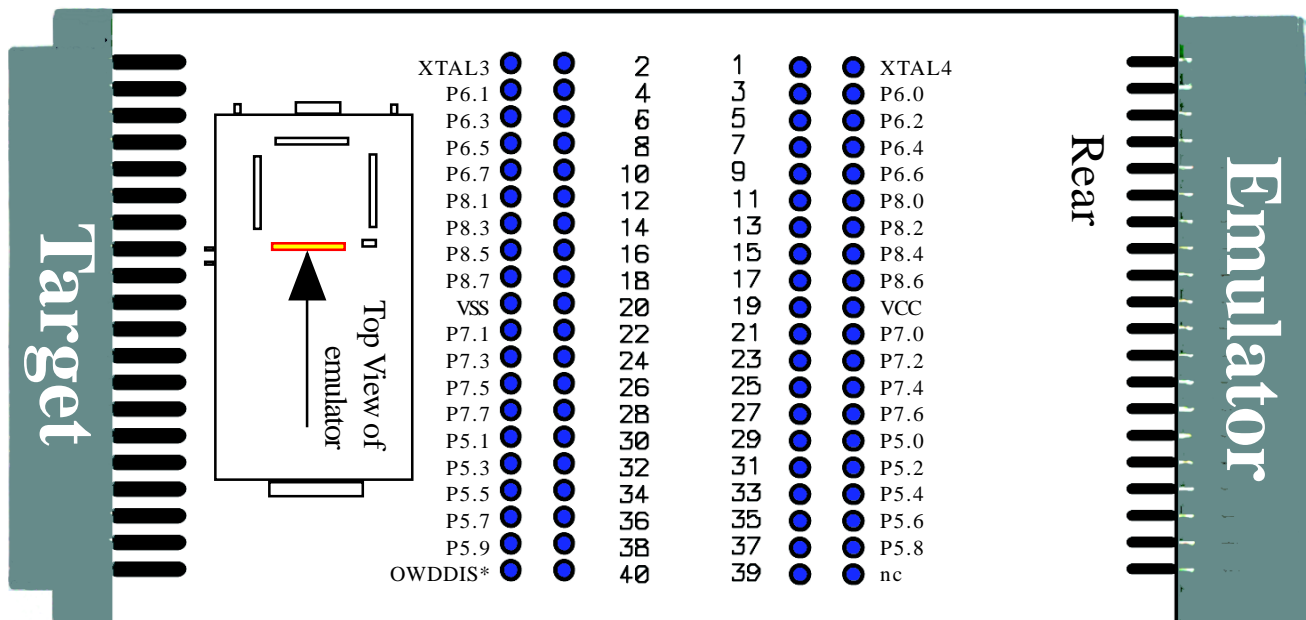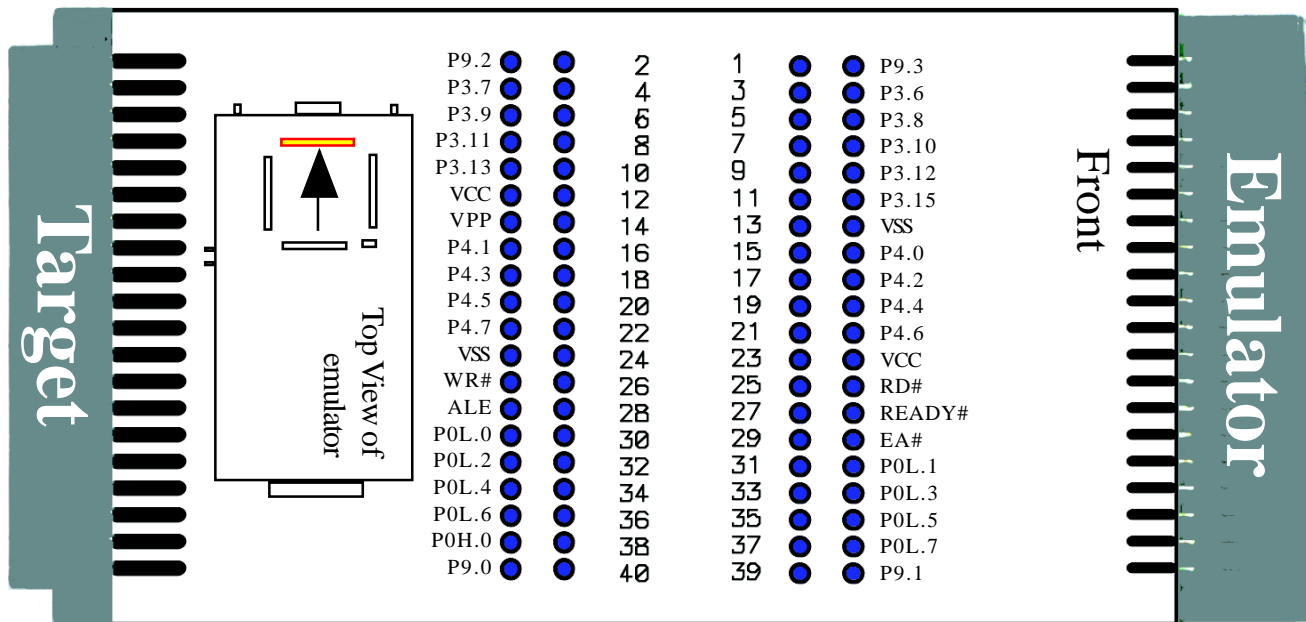

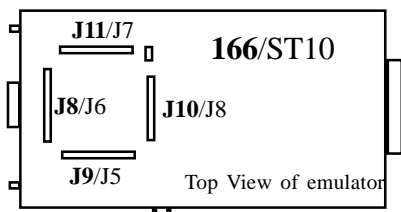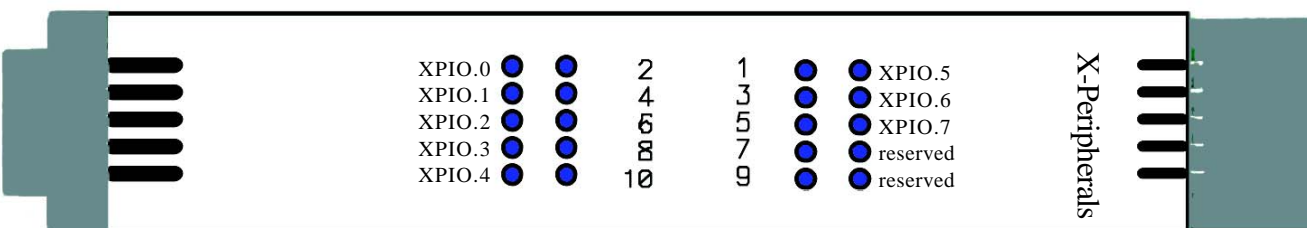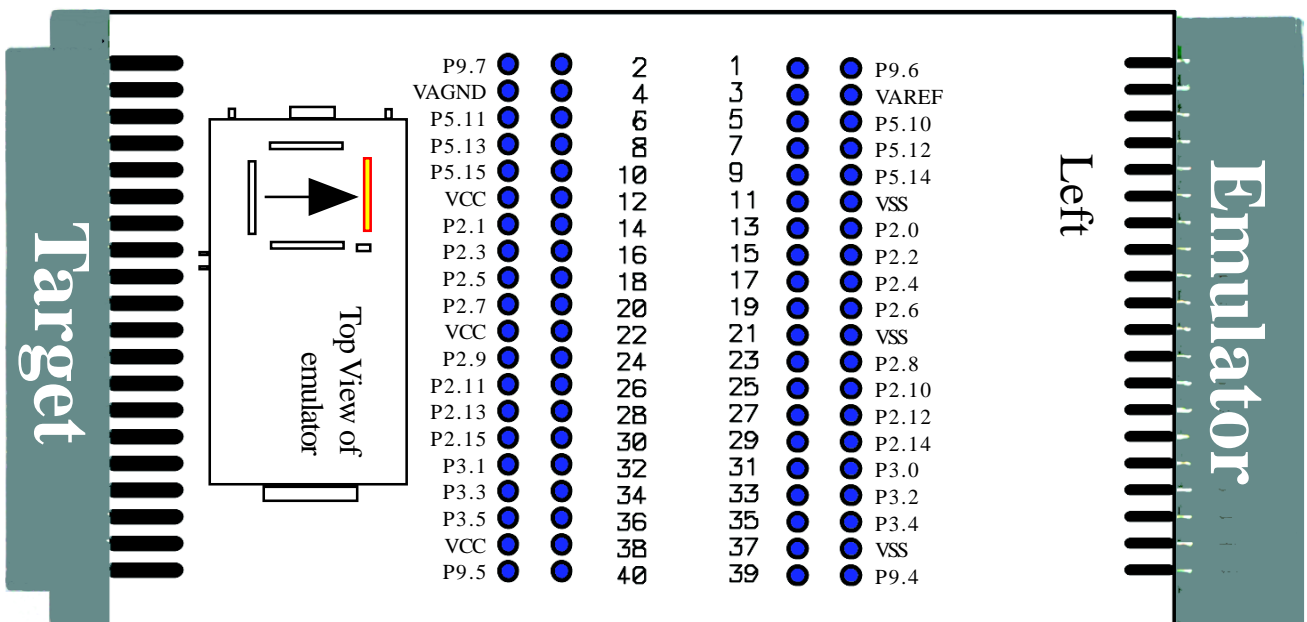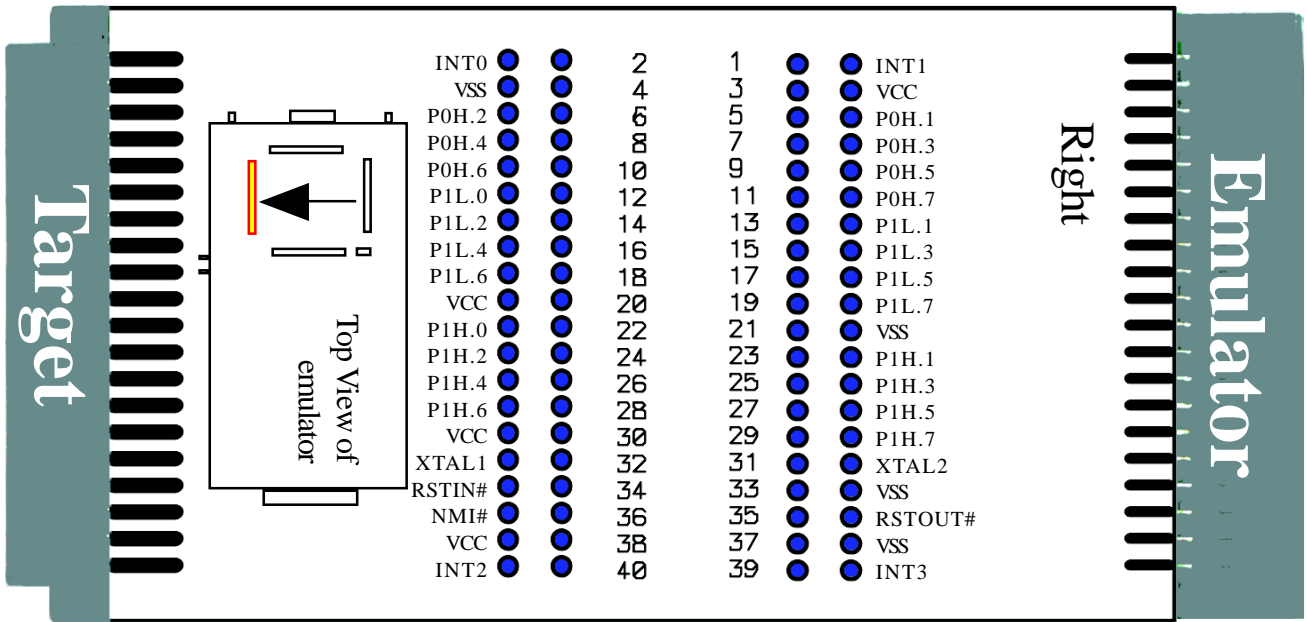

Pins 1,2 and 39,40 are emulator dependent. Please contact Nohau Technical support for detailed information at 1-888-886-6428 or support@nohau.com.